


Sanitary Roof Hydrant Winterizing Instructions


1.) NO RESTRICTIONS, REMOVE HOSE AND BACKFLOW PREVENTER IF USED

To prevent freezing during the winter months, it is essential that the hydrant reservoir be evacuated to ensure proper drainage of the standpipe. Any restriction downstream of the factory supplied hose bib will prevent the hydrant reservoir from emptying. Therefore, for winter use, remove the hose and backflow preventer, if used, using the quick disconnect supplied.

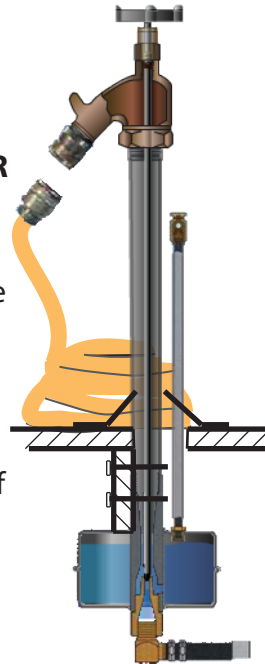


2.) FULLY OPEN 30 SECONDS

Empty the reservoir by operating the hydrant at full flow for 30 seconds to prevent hydrant freeze-ups.

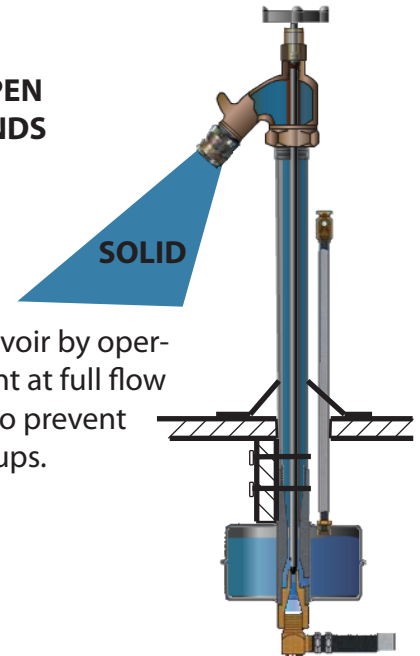


3.) WATER FLOW BECOMES AERATED

During this time you should notice the water flow is solid and then becomes aerated. Reservoir is empty when water exiting outlet is aerated.

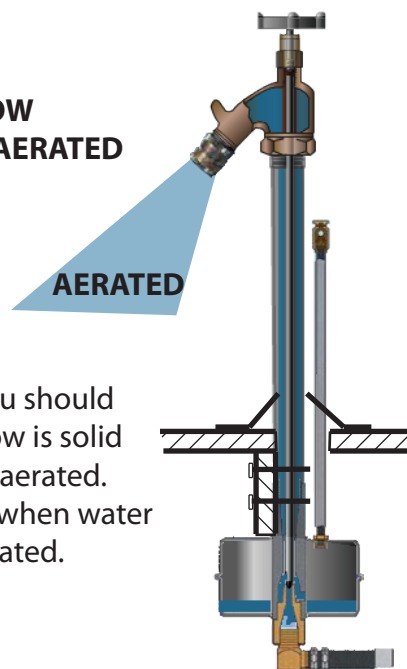

4.) FINISHED, SHUT OFF HYDRANT

Shutting off hydrant at this point will permit the water in the standpipe to drain back into the empty reservoir.

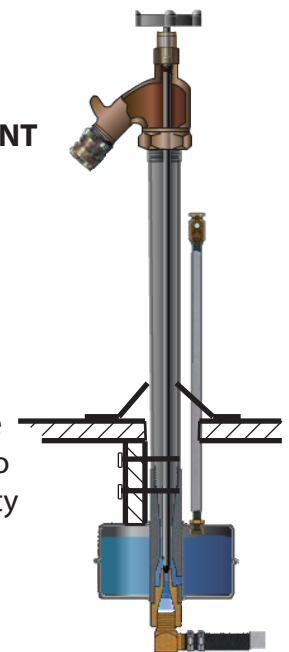

More Winterizing information is available at www.freeze-flow.com