


## Executive Sanitary Yard Hydrant Installation and Operating Instructions

### Installation

1. It is most important to Flush supply lines before installing hydrant. Failure to do so may permanently damage sealing surface causing leaks and possible freeze-ups.
2. Install hydrant so that the Adapter or Bushing is above grade for servicing. Figure 1.
3. Attach hydrant to supply lines using Teflon Tape or an approved thread sealant for PVC.
4. Do not over tighten PVC portion of hydrant to supply lines as it will damage hydrant.

### Operation

1. No winterization is required to prevent hydrant from freezing.
2. Lift up on lever to turn on, push down on lever to turn off.
3. As hydrant is turned on some water will come out port holes in vacuum breaker, this is normal.
4. When the hydrant is shut off it will drain to the reservoir to prevent freezing, even if a hose with pistol grip nozzle is attached. However, the hose will not drain.
5. **DO NOT** remove, discard, or bypass Backflow Preventer as Hydrant will not function properly.

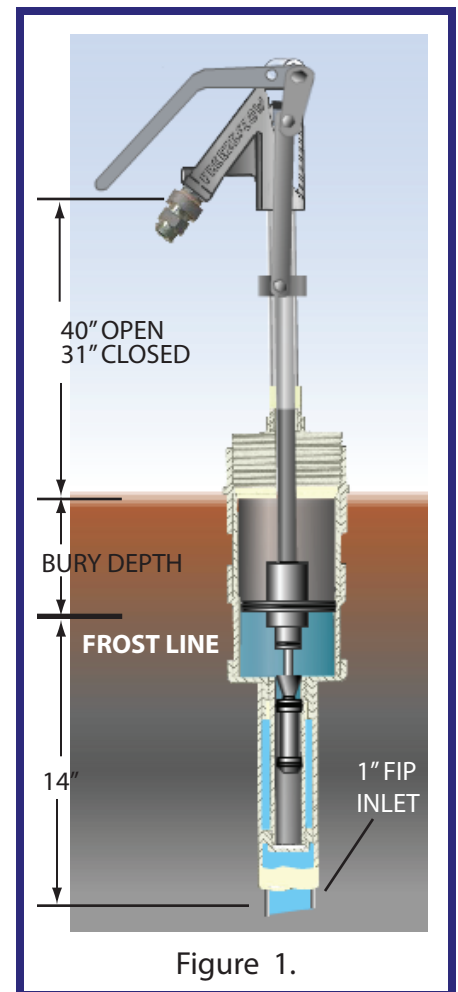

See Maintenance: "Field Testing the Backflow Preventer" for further information on the Backflow Preventer.